



# User Guide

BT DIVERSE 6350



# Welcome...

to your BT Diverse 6350 digital  
corded / cordless twin telephone  
answering machine

- Directory lets you store up to 100 names and numbers for easy dialling.
- Copy the whole directory or individual entries to and from your mobile phone SIM card.
- Use the headset with the cordless handset to keep your hands free for other tasks while making and receiving calls.
- Send and receive SMS text messages.
- Caller Display lets you see who's calling and your phone stores details of the last 30 callers in a Calls list. Caller Display requires subscription.
- Answering machine can be operated from the corded telephone base, the additional handset or by remote access from another phone.
- Expandable system. You can have up to 6 GAP compatible handsets registered to your BT Diverse 6350 corded telephone. Make internal calls between two handsets while a third is on an external call.
- Digital call clarity with up to 300m range outdoors and up to 50m indoors (in ideal conditions).



This User Guide provides you with all the information you need to get the most from your phones.

You must first set up your phones before you can use them. This doesn't take long as it is easy to do. Just follow the simple instructions on the next few pages.

#### ■ **Need help?**

If you have any problems setting up or using your BT Diverse 6350, contact the Helpline on **0870 240 3962** or email [bt.helpdesk@vtecheurope.com](mailto:bt.helpdesk@vtecheurope.com)

Alternatively, you may find the answer in 'Help' at the back of this guide.

#### ■ **Hearing aid?**

Please note that the BT Diverse 6350 works by sending radio signals between the base and handset. These signals may interfere with some hearing aids, causing a humming noise.

#### **Got everything?**

- BT Diverse 6350 corded telephone
- Mains power adaptor
- Handset cord
- Telephone line cord
- BT Diverse 6200 additional handset with belt clip
- BT Diverse 6200 charger
- Mains power adaptor for the charger
- Headset for additional handset
- 2 x AAA rechargeable batteries for additional handset (already inserted in handset)
- Desk mount (already fitted)
- 2 Screws and wall plugs

# In this guide

<b>Getting started</b> .....	8	Directory .....	23
Location .....	8	Open the directory .....	23
Setting up .....	9	Entering names .....	23
Battery low warning .....	10	Writing tips .....	24
<b>Getting to know your phone</b> .....	12	Character map .....	24
Corded telephone base .....	12	New directory entry .....	25
Additional handset .....	13	Insert a pause into a directory entry ..	25
Main display icons .....	14	Dial from the directory .....	25
Navigating the menus .....	15	View a directory entry .....	26
Menu map .....	16	Copy an entry to another handset ..	26
<b>Using your phone</b> .....	17	Copy the entire directory to another handset .....	27
Switch handset on and off .....	17	Edit an entry .....	27
Handset ringer on/off .....	17	Delete an entry .....	28
Making calls .....	17	Delete the entire directory .....	28
Handsfree .....	18	Copy SIM .....	28
Headset .....	19	Copy to/from SIM card .....	29
Volume .....	19	Internal calls .....	30
Secrecy .....	19	Call another handset .....	30
Redial .....	20	Transfer a call to another handset ..	30
Keypad lock .....	21	Put a caller on hold and call another handset .....	31
Quick access to messages .....	22	Conference call .....	31
SMS text messages .....	22	<b>Caller Display</b> .....	32
Messages on the answering machine .....	22	Calls list .....	32
Calls .....	23	View the calls list .....	32

Dial from the calls list	33
Copy a number to the directory	33
Delete an entry in the calls list	33
Delete the entire calls list	34

<b>BT Calling Features</b>	35
BT Helpdesk	35
BT Directory Enquiries	35
Call Divert On	36
Call Divert Off	36
Check Divert	36
Call Waiting On	37
Call Waiting Off	37
Check Call Waiting	37

<b>SMS text messages</b>	38
Subscribe to SMS service	38
Cost of fixed line service	39
Send an SMS text message	39
Receiving a call while writing a text	40
Sent messages in the Outbox	41
Saved messages in the Drafts folder	41
Entering text	41
Special characters	41
Writing tips	42
SMS templates	42
Edit SMS template	43
Delete SMS template	43

Read, edit and send	
draft SMS messages	44
Reading SMS text messages	45
SMS Alert	46
SMS Service Centre numbers	46
Adding or changing	
SMS Service Centre numbers	47
Select a Send Service Centre number	47
SMS User Areas	48
Setting up a user area	48
Send a text to an SMS user area	49
Open an SMS user area	49

<b>Handset settings</b>	50
Ringer melody and volume	50
Screen font and contrast	50
Handset name	51
Handset beeps	52
Auto talk	52
Select base	53

<b>Base settings</b>	54
Ringer melody and volume	54
Dialling mode	54
Handset beeps on/off	55
Music on hold	55
System PIN	56
Repeater mode	57

<b>Calendar/Clock</b> .....	58	Call screening using a handset .....	69
Appointment reminder .....	58	Call screening at the base .....	69
Alarm .....	59	Answering machine settings .....	70
Time & Date .....	60	Memory full .....	71
<b>Answering machine</b> .....	61	Remote access .....	72
Date and time .....	61	Security PIN .....	72
Operating the answering machine		Switch on answering machine	
at the base .....	62	remotely .....	72
Switch on/off .....	62	Time saver .....	72
Loudspeaker volume .....	62	Operating your answering machine	
Message indicator .....	62	from another phone .....	73
Play, repeat, skip, delete .....	62	Message indicator .....	74
Operating from a handset .....	63	<b>Additional handsets and bases</b> .....	75
Switch on/off .....	63	Registering additional handsets .....	75
Outgoing messages .....	64	Register a new BT Diverse 6200	
Answer & Record .....	64	handset to your BT Diverse 6350	
Answer Only .....	64	base .....	75
Record your own outgoing message ..	65	Register your handset to	
Play outgoing message .....	65	another base .....	76
Answer delay .....	66	Select a base .....	77
Audible message alert .....	66	De-register handset .....	77
New message display .....	67	<b>Help</b> .....	78
Quick access to your messages .....	67	Helpline .....	82
Play, pause, delete, volume .....	67	For your records .....	83
Delete all messages .....	68		
Record a memo .....	68		

---

<b>General information</b> .....	84
Safety .....	84
Cleaning .....	85
Environmental .....	85
Product disposal instructions .....	86
Connecting to a switchboard .....	87
Dialling mode .....	87
Guarantee .....	87
Additional/Replacement items .....	88
How many telephones can you have? ..	89
R&TTE .....	89
 <b>Wall mounting your phone</b> .....	 90

# Getting started


## WARNING

Do not place your BT Diverse 6350 in the bathroom or other humid areas.

## Handset range

The BT Diverse 6200 additional handset has a range of 300 metres outdoors when there is a clear line of sight between the base and the handset. When there is no clear line of sight between the base and the handset, e.g. base indoors and handset either indoors or outdoors, the range could be reduced to 50 metres. Thick stone walls can severely affect the range.

## Signal strength

The  symbol on your handset screen indicates when you are in range. When you are out of range, it flashes and the screen displays SEARCHING and there is a beep, you are out of range.

## IMPORTANT

The BT Diverse 6350 corded telephone must be plugged into the mains power at all times.

## Which socket?



Power socket



Telephone line socket

## Location

You need to place your BT Diverse 6350 close enough to a mains power and telephone socket so that the cables will reach.

Make sure it is at least 1 metre away from other electrical appliances to avoid interference.

Your BT Diverse 6200 additional handset works by sending radio signals between the handset and the BT Diverse 6350 corded telephone. The strength of the signal depends on where you site the telephone. Putting it as high as possible ensures the best signal.


Your BT Diverse 6350 and BT Diverse 6200 additional handset can both be wall mounted, see wall mounting on page 90.

## Setting up


### Corded telephone

1. Connect the straight end of the curly handset cord into the base. Connect the other end of the cord to the handset.
2. Plug the mains power adaptor into the power socket on the underside of the base. Plug the other end into the mains socket. The display lights up.



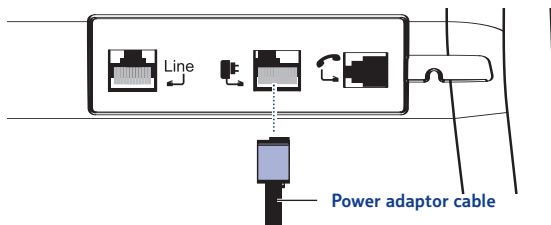

3. Connect the telephone line cord to the base of the BT Diverse 6350 corded telephone and plug the other end into the wall socket.

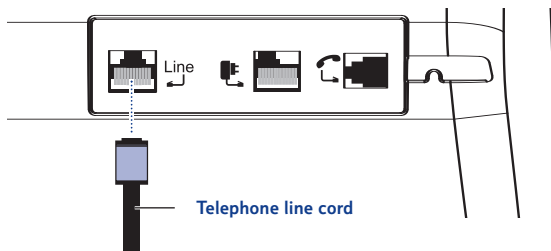

4. Press the line cables into the grooves on the base of the phone so that the phone can lie flat.

Providing you have subscribed to your network's Caller Display service, the day and time is automatically set when you receive your first incoming call.

However, you can also set the day and time manually, *see page 60*.

## 10 Getting started

### Battery low warning

When the batteries need recharging, the handset beeps and the display shows .

### Battery level

The battery symbol shows the current level



### Battery performance

To keep your batteries in the best condition, leave the handset off the base for a few hours at a time (after the initial 16 hour charge).

Running the batteries right down at least once a week will help them last as long as possible.

On a full charge, your BT Diverse 6200 additional handset gives up to 13 hours talk time or up to 170 hours standby.

The charge capacity of rechargeable batteries will reduce with time as they wear out, giving the handset less talk/standby time. Eventually they will need to be replaced

Batteries and handset may become warm during charging. This is normal.

## Setting up


### Additional handset and charger

#### Location

You need to place your BT Diverse 6200 charger close enough to a mains power socket so that the cable will reach.

Your BT Diverse 6200 additional handset and charger can be wall mounted, see wall mounting on page 90.

4. Plug the power adaptor cable into the underside of the charger.

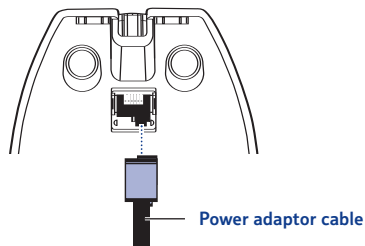

5. Plug the power adaptor into the mains wall socket and switch the power on.
6. Batteries will come inserted in the battery compartment. Pull the plastic tag as instructed to activate the batteries.

7. Place the handset in the charger and charge the handset for at least 16 hours.

The BT Diverse 6200 additional handset comes pre-registered to the corded telephone base, so once the handset has been fully charged, it is ready for use.

If you purchase any further additional handsets you will need to register them. Please see page 75 for instructions.

**Your BT Diverse 6350 is now ready for use.**


Under no circumstances use non-rechargeable batteries. Only use NiMH rechargeable batteries with a recommended capacity of 750mAh. Using inappropriate batteries will invalidate your guarantee and may damage the telephone.

#### Helpline


If you are having any difficulties setting up or using your BT Diverse 6350, please call the BT Diverse Helpline on **0870 240 3962** or email [bt.helpdesk@vtecheurope.com](mailto:bt.helpdesk@vtecheurope.com)

# Getting to know your phone

## Corded telephone

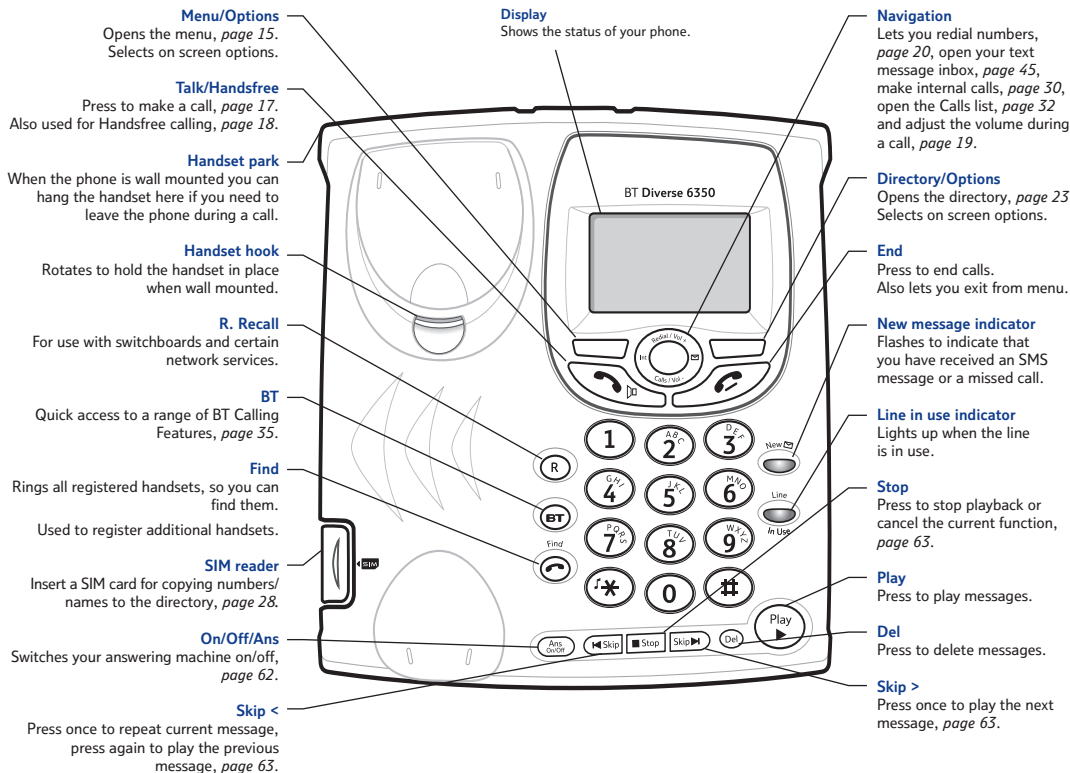


## Additional handset

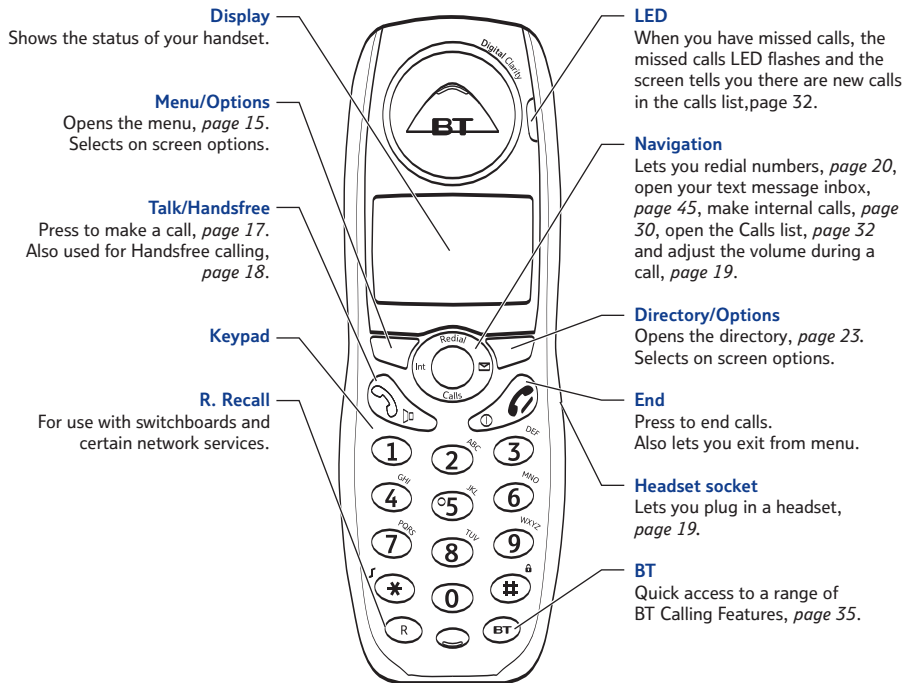


## 14 Getting to know your phone

---

### BT Diverse 6350 corded telephone main display icons

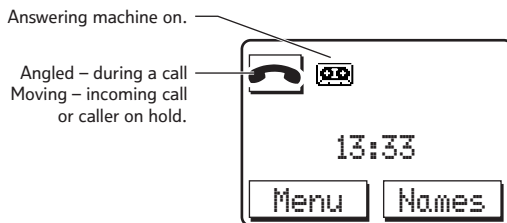

### BT Diverse 6200 additional handset main display icons

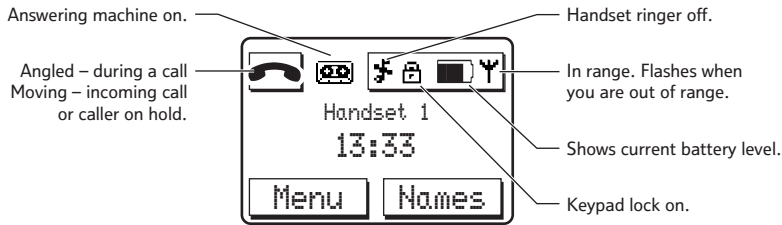

## Navigating the menus...

Your BT Diverse 6350 has a menu system which is easy to use. Each menu leads to a list of options. Have a look at the menu map on the following page.

Press **MENU** to open the main menu and use the navigation button to scroll up or down to the menu you want. Press the **OK** option button to access the features in the menu.

## ... and selecting menu options

Once the menu list you want is open, use the navigation button to scroll up or down through the options then press **OK** to select the option you want. For example, to adjust the handset ringer melody for external calls:



1. Press **MENU** then scroll **DOWN** to **HANDSET SETTINGS** and press **OK**. Display shows **RINGER**.
2. Press **OK**. Display highlights **EXTERNAL MELODY**. Navigate **RIGHT** or **LEFT** to display and hear the option. Press **SAVE** to confirm.

## Go back one level

You can go back to the previous menu level at any time by pressing the **BACK** option button.

## 16 Getting to know your phone

**Exit menu:** If you want to exit a menu or the directory, either press **END** until the display returns to standby, or press **BACK** until the standby screen appears.

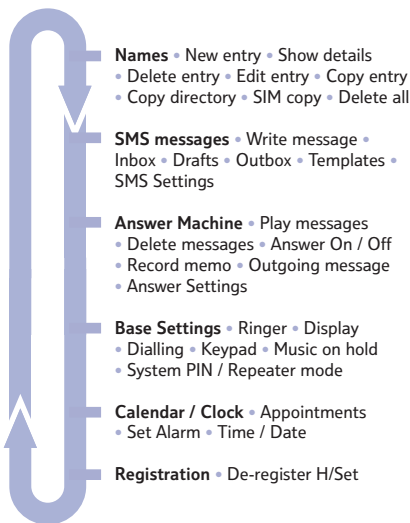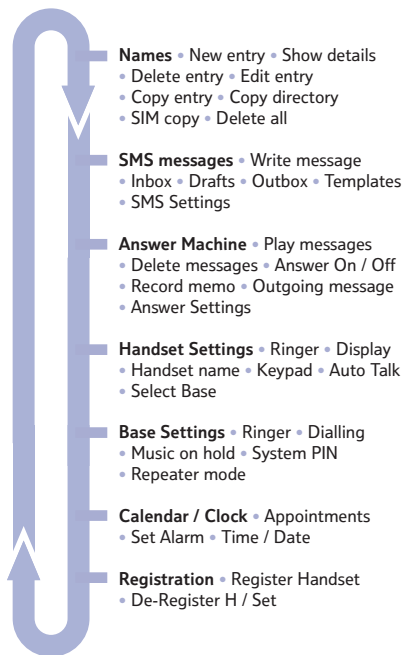

**Corded handset menu map****Cordless handset menu map**






# Using your phone

The instructions and features are the same using either the corded telephone or the cordless handset unless stated otherwise.

## Switch handset on and off (cordless handset only)


1. Press *and hold*  to switch the handset off.
2. Press *and hold*  again to switch it back on.

## Handset ringer on/off (cordless handset only)

1. Press *and hold*  to switch the handset ringer off.  
Display shows .
2. Press  again to switch it back on.

## Making calls

### Make an external call

1. *Using the corded handset:* Pick up the handset and dial the number.  
*or*  
*Using the cordless handset:* Pick up the handset and press . Dial the number.

The **Line In Use** light on the BT Diverse 6350 corded telephone lights up to indicate the line is in use.

### Note

Press the **BACK** options button to go back to the previous step in a menu. Or press **END** to cancel and return the phone to standby.


### Call timer

Your phone automatically times the duration of every external call. The time is shown on the display during the call and for a few seconds after the call has ended.


## 18 Using your phone

---

### Preparatory dialling

1. Enter the number first. If you make a mistake press **CLEAR** to delete. Press  to dial.

### End a call

Press  or place the handset back on the base.


## Handsfree

Handsfree lets you talk to your caller without holding the handset. It also enables other people in the room to listen to both sides of your conversation.

1. *Using the corded handset:* Press  once.


*or*

*Using the cordless handset:* Press  twice.

2. The display shows  and you can hear the dial tone over the loudspeaker. Dial the number.

3. To switch the call back to the handset:  
*Using the corded handset:* Simply lift the handset.

*or*

*Using the cordless handset:* Press .

## Headset (cordless handset only)

1. Remove the rubber bung and plug the headset into the socket on the side of the handset.



2. Make and receive calls as normal.

## Volume

1. During a call, press the navigation button **UP** or **DOWN** to increase or decrease the call volume.

## Secrecy



When on a call, you can talk to someone in the same room without your caller hearing.

1. During a call, press **SECRECY**. Display shows **SECRECY ON**. Your caller cannot hear you.
2. Press **OFF** to resume your call.



## Redial

You can redial any of the last ten numbers.

### Redial


1. Press . The last number dialled is displayed.
2. Scroll **UP** or **DOWN** to the number you want.
3. Press  to dial.



### Delete a redial number

1. Press . The last number dialled is displayed. Scroll **UP** or **DOWN** to the number you want.
2. Press **OPTIONS**, DELETE CALL is highlighted.
3. Press **OK**. The number is deleted. Press  to return to standby.



### Save a redial number

You can save a number to the directory.

1. Press . The last number dialled is displayed. Scroll **UP** or **DOWN** to the number you want.
2. Press **OPTIONS** and scroll **DOWN** to SAVE NUMBER. Press **OK**.



3. Enter the NAME (*see Entering names page 23*).
4. If necessary scroll **DOWN** to edit the NUMBER then press **SAVE**.  is displayed and the message that the name/number is saved. Press  to return to standby.

### Delete all redial numbers


1. Press . The last number dialled is displayed.
2. Press **OPTIONS** then scroll **DOWN** to **DELETE ALL CALLS** and press **OK**. **DELETE ALL CALLS?** is displayed.
3. Press **YES** to confirm or **NO** to cancel. Press the  to return to standby.

## Keypad lock (cordless handset only)

You can lock the keypad on the cordless handset to prevent accidentally dialling numbers while carrying it around.


1. Press *and hold*  until you hear a beep.  
Screen shows **KEYPAD LOCKED**.
2. To unlock the keypad, press **UNLOCK** then .  
Display shows **KEYPAD UNLOCKED**.

## Quick access to messages



When the screen shows you have new CALLS or SMS, press  on the navigation button to see details of new missed calls and/or new text messages.

New calls/SMS messages are indicated on all registered handsets until viewed.


### SMS Text messages

1. Press . Screen highlights SMS. Press **OK**.
2. Scroll **UP** or **DOWN** through the message list.  
Press **READ** to read the message.
3. Press **BACK** to return to the previous menu.

### Messages on the answering machine

1. Press . Screen highlights SMS.
2. Scroll **DOWN** to MESSAGES. Press **OK**.
3. Message playback will begin. Use  to hear messages through the speaker.
4. If required, press **PAUSE** or **DELETE**.
5. You can skip to the next message by pressing **RIGHT**.  
One press of **LEFT** will play a message again and two quick presses of **LEFT** will skip back to the previous message.

## Calls

1. Press . Screen highlights SMS.
2. Scroll **DOWN** to MISSED CALLS. Press **OK**.
3. Scroll **UP** or **DOWN** through the calls list.
4. Press **BACK** to return to the previous menu.

## Directory

You can store up to 100 names and numbers in the directory. Names can be up to 16 characters long and numbers up to 24 digits long.


### Open the directory

1. Press **NAMES**. Stored entries are displayed alphabetically.

### Entering names

Use the keypad letters to enter names, e.g. to store TOM:

Press  *once* to enter T.

Press  *three times* to enter O.

Press  *once* to enter M.

## 24 Using your phone

**Writing tips**

If you make a mistake, press **CLEAR** to delete the last character or digit.

Press **0** *once* to insert a space.

Your phone is set to insert the first letter of a name as an upper case letter. The rest will be in lower case.


Press **\*** to set lower case or upper case letters.

**Character map**

Button	Upper case	Lower case
<b>0</b>	Space 0 + & _ \$ £ € ¥ < > = # *	Space 0 + & _ \$ £ € ¥ < > = # *
<b>1</b>	., ' ? ! " 1 - ( ) @ / : ;	., ' ? ! " 1 - ( ) @ / : ;
<b>2</b>	A B C 2 Ä Å Æ Ç	a b c 2 ä å æ ç
<b>3</b>	D E F 3 Ê Ë Ì	d e f 3 ê ë ì
<b>4</b>	G H I 4 Î Ï	g h i 4 î ï
<b>5</b>	J K L 5	j k l 5
<b>6</b>	M N O 6 Ö Ø Ó Ô Õ Ñ	m n o 6 ö ø ó ô õ ñ
<b>7</b>	P Q R S 7 Ò Ó	p q r s 7 ò ó
<b>8</b>	T U V 8 Ü Ú Û Ü	t u v 8 ü ú û
<b>9</b>	W X Y Z 9 Ÿ Ž	w x y z 9 ý ž
<b>*</b>	Abc → ABC / ABC → abc / abc → Abc	Abc → ABC / ABC → abc / abc → Abc
<b>#</b>		




### New directory entry

1. Press **NAMES** then **OPTIONS**. Display shows **NEW ENTRY**. Press **OK**.
2. Use the keypad to enter the name then scroll **DOWN**.
3. Enter the number, scroll **DOWN**.
4. Enter the ringtone you want to assign to the directory entry by pressing **LEFT** or **RIGHT** on the navigation button.
5. Press **SAVE**, the entry is shown in the directory.
6. To add another entry, press **OPTIONS** or press  to return to standby.

### Insert a pause into a directory entry

You may need to do this if your BT Diverse 6350 is connected to a switchboard.


1. When entering a number, usually after entering the switchboard access code (e.g. 9) press *and hold*  until P appears in the display.

### Dial from the directory


1. Press **NAMES** then scroll **UP** or **DOWN** to the entry you want.

## 26 Using your phone

---

2. Alternatively, press **NAMES** then enter the first letter of the name you want. E.g. for Emma, press **3** <sup>twice</sup> to display names beginning with E, then scroll to the name you want.
3. Press . The number is displayed and dialled.

### View a directory entry

1. Press **NAMES** and scroll **DOWN** to the entry you want then press **OPTIONS**.
2. Scroll **DOWN** to **SHOW DETAILS** and press **OK**.
3. The name, number and ringtone are displayed.
4. Press  to return to standby.

### Copy an entry to another handset


1. Press **NAMES** and scroll **DOWN** to the entry you want then press **OPTIONS**.
2. Scroll **DOWN** to **COPY ENTRY** and press **OK**.
3. Enter the number of the handset you want to copy the entry to then press **OK**. Screen shows **COPYING TO BASE STATION**.
4. At the receiving handset the screen shows **RECEIVE DIRECTORY ENTRY?** Press **YES**.

5. The receiving handset screen shows COPYING FROM BASE STATION.

### Copy the entire directory to another handset

1. Press **NAMES** then **OPTIONS**.
2. Scroll **DOWN** to COPY DIRECTORY and press **OK**.
3. Enter the number of the handset you want to copy the entry to then press **OK**. Screen shows COPYING TO HANDSET X.
4. At the receiving handset the screen shows REPLACE DIRECTORY? Press **YES**.
5. The receiving handset screen shows COPYING FROM BASE STATION.

### Edit an entry

1. Press **NAMES** and scroll **DOWN** to the entry you want then press **OPTIONS**.
2. Scroll **DOWN** to EDIT ENTRY and press **OK**, and press **CLEAR** to edit characters or numbers.
3. Use the keypad to edit the name then scroll **DOWN** to the number and edit the number.
4. Press **SAVE**. Press  to return to standby.

### Directory full

If you are copying a directory entry to another handset and the directory memory is full the receiving handset screen shows DIRECTORY FULL and the sending handset shows COPY DIRECTORY ENTRY FAILED.


### IMPORTANT

Copying an entire directory will replace any existing entries stored in the receiving handset.


## 28 Using your phone

---

### Delete an entry

1. Press **NAMES** and scroll **DOWN** to the entry you want then press **OPTIONS**.
2. Scroll **DOWN** to **DELETE ENTRY** and press **OK**.
3. **DELETE X?** is displayed. Press **YES** to delete or **NO** to cancel.
4. Press  to return to standby.

### Delete the entire directory

1. Press **NAMES** then press **OPTIONS**.
2. Scroll **DOWN** to **DELETE ALL** and press **OK**.
3. **DELETE ALL ENTRIES?** is displayed. Press **YES** to delete or **NO** to cancel.
4. Press  to return to standby.

### Copy SIM


Copy entries to and from compatible mobile phone SIM cards. Copied entries are added to any existing entries that have been stored. You can accept or reject each entry until your directory is full.

If a copied name has more than 16 characters, your BT Diverse 6350 will store the first 16 characters only.

If the copied entry has more than 24 digits, your BT Diverse 6350 will store the first 24 digits only.

## Copy to or from a SIM card

1. Insert the SIM card into the SIM READER slot on the BT Diverse 6350 corded telephone.

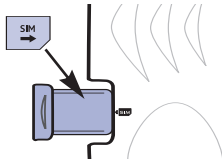

2. Press **NAMES** then **OPTIONS**.
3. Scroll **DOWN** to SIM COPY and press **OK**.
4. Enter the SIM Card PIN and press **OK**.

The screen displays SIM TO PHONE/PHONE TO SIM.

If copying to the SIM Card, scroll **DOWN** to highlight PHONE TO SIM.

5. Press **OK**. The list of directory names is displayed. Scroll **UP** or **DOWN** to the entry you want and press **OPTIONS**.
6. Screen shows COPY ENTRY/COPY ALL. Use **UP** or **DOWN** to highlight the option you want and press **OK**.
7. If selecting a single entry, the screen shows NAME COPIED. You can now select another entry.

If copying all entries, each entry is displayed and copied until all entries are copied or the directory is full.

If you have problems copying directory entries from your SIM onto the BT Diverse 6350 place the SIM back into your mobile and confirm that the directory entries are stored on the SIM and not within the mobile handset directory. If this is not the case then you will need to copy the entries from your mobile handset directory onto the SIM. Refer to your mobile user guide for details. Note: sometimes the mobile handset directory entries will appear differently when they are copied to the SIM, with the name being appended with a number, e.g. Tom 1.

If handset directory is empty, the screen only shows SIM TO PHONE.

If no SIM card is inserted INSERT SIM CARD ON BASE is displayed on the screen.

If you enter the wrong PIN twice, SIM PIN ERROR is displayed and the screen returns to standby. Check that you have the right SIM PIN. If you cannot find it, contact your mobile phone network for help.

## Internal calls

You can make internal calls and transfer calls between the base and additional handset and any other additional handsets you have registered to the base.

### Call another handset

1. Press **Int**. The other handset will ring. If you have more handsets, all available handsets are displayed. Scroll **DOWN** to highlight the handset you want and press **OK**.

If the other handset is making an external call, the screen shows NOT AVAILABLE.

### Transfer a call to another handset

1. During an external call, press **Int**. Your caller is put on hold.
2. The other handset will ring. If you have more handsets, select the handset number you want to call and press **OK**.
3. When the other handset answers, press **END** to transfer the call.

### Put a caller on hold and call another handset

If music on hold is switched on, *see page 55*, your caller will hear musical tones while they are on hold.

1. During an external call, press **Int**. Your caller is put on hold.
2. The other handset will ring. If you have more handsets, select the handset number you want to call and press **OK**.
3. Press **Int** to switch back and forth between your external and internal callers.

### Conference call

You can hold a 3-way conversation with an external caller and another handset user at the same time.

1. During an external call, press **Int**. Your caller is put on hold.
2. The other handset will ring. If you have more handsets, select the handset number you want to call and press **OK**.
3. Press **JOIN** to speak to both callers together. The screen shows **CONFERENCE CALL**.

# Caller Display

## IMPORTANT

To use Caller Display you must first subscribe to your network provider's Caller Display service. A quarterly fee is payable.

For more details on BT's Calling Features, call BT free on **0800 800 150**.

When you have missed calls, the missed calls **LED** flashes and the screen tells you there are new calls in the Calls list.

If the same number rings you more than once, each call is stored in the calls list

If you subscribe to a Caller Display service, your handset shows who is calling (provided the number is not withheld, unavailable or is an international call).

If you have stored a name to go with the number in your handset directory, the name will be displayed instead.


## Calls list

The Calls list contains the telephone numbers of your last 30 callers.

Whether you take a call or not, the caller's details are stored in the Calls list. You can display, scroll through, dial and copy numbers in the list.


If a call is received when the Calls list is full, then the oldest entry will be deleted automatically

## View the Calls list


1. Press **CALLS** to open the Calls list.
2. Display shows details of calls. Scroll **UP** or **DOWN** through the list.
3. Press  to return to standby.




### Dial from the Calls list

1. Press **CALLS** to open the Calls list.
2. Scroll **DOWN** to the name or number you want.
3. Press  to dial.

### Copy a number to the directory

1. Press **CALLS** to open the Calls list.
2. Scroll **DOWN** to the name or number you want.
3. Press **OPTIONS**, scroll **DOWN** to **SAVE NUMBER** and press **OK**.
4. Enter the name. If necessary scroll **DOWN** to edit the number then press **SAVE**.
5. Press  to return to standby.


### Delete an entry in the Calls list

1. Press **CALLS** to open the Calls list.
2. Scroll **DOWN** to the name or number you want.
3. Press **OPTIONS**, **DELETE CALL** is highlighted. Press **OK**.  
Screen shows **CALL DELETED**.
4. Press  to return to standby.


## 34 Caller Display

---

### Delete the entire Calls list

1. Press **CALLS** to open the Calls list.
2. Press **OPTIONS** and scroll **DOWN** to **DELETE ALL CALLS**. Press **OK**. **DELETE ALL CALLS?** is displayed.
3. Press **YES** to confirm or **NO** to cancel.
4. Press  to return to standby.



# BT Calling Features

By pressing the  button on the handset your BT Diverse 6350 gives you easy access to a range of pre-stored BT Calling Features.

*These are:*

- BT Helpdesk.
- BT Dir. Enquiries.
- Call Divert On.
- Call Divert Off.
- Check Divert.
- Call Waiting On.
- Call Waiting Off.
- Check Call Wait.

## BT Helpdesk

1. Press  then scroll **DOWN** to BT HELPDESK and press .
2. The BT Helpdesk for this product will be automatically dialled.

## BT Directory Enquiries

*Using the handset:*

1. Press  then .

The BT Calling Features works in exactly the same way as the main name and number directory and can store up to 10 entries.

If you prefer, you can delete the pre-stored entries and replace them with your own numbers. New stored numbers are added to the end of the list.

Call Diversion services may allow other divert options. Check with your network provider for details.



For further information, see the BT Calling Features User Guide supplied when you subscribe to the services of your choice.

*Using the base:*



1. Press  then scroll **DOWN** to Dir Enquiries and press .

### Call Divert On



Divert all incoming calls to another number of your choice.

1. Press  then scroll **DOWN** to Call Divert On and press .
2. Follow the spoken instructions.

### Call Divert Off



1. Press  then scroll **DOWN** to CALL DIVERT OFF and press .
2. Listen for confirmation of your instructions.

### Check Divert



1. Press  then scroll **DOWN** to CHECK DIVERT and press .
2. Listen to hear the status of your Call Divert.

## Call Waiting On



Call Waiting lets you know if another person is trying to contact you whilst on a call. If a second caller rings you will hear a beep in the handset. Providing you have Caller Display, the screen will show the caller's details.

1. Press  then scroll **DOWN** to CALL WAITING ON and press .
2. Listen for confirmation of your instructions.

## Call Waiting Off

1. Press  then scroll **DOWN** to CALL WAITING OFF and press .
2. Listen for confirmation of your instructions.

## Check Call Waiting

1. Press  then scroll **DOWN** to CHECK CALL WAITING and press .
2. Listen to hear the status of your Call Waiting.

If you are not connected to the BT network, some of these services may not be available. Please contact your Network Provider.

# SMS text messages

SMS stands for Short Messaging Service

## IMPORTANT

You must subscribe to your Network Provider's Caller Display service so that you can use SMS text messaging. A quarterly fee may be payable, please contact your network provider for more details.

When you are using SMS text messaging you must not withhold your telephone number or the service will not allow you to connect.

You may also send messages to landline phones that are NOT SMS compatible. Messages to non-compatible lines will be connected to voice text and delivered in spoken words to the telephone as a call. Please note that the conversion can translate common abbreviations and smileys etc, but to ensure maximum clarity of message delivery, abbreviations etc should be used sparingly.

Welcome to the BT Text Service on your BT Diverse 6350. The SMS service is provided by BT.

Your BT Diverse 6350 can send and receive messages to any mobile phone from participating mobile networks and compatible landline telephones in the UK.

The fixed line SMS service is provided under BT's terms and conditions for telephone service. These can be found by visiting the BT.com website at:  
<http://www.bt.com/terms/tor.htm>

## Subscribe to the SMS service

When you send your first SMS text message from your BT Diverse 6350 you will automatically be registered for the service.

On receipt of your first SMS through the service, the system will send you a welcome SMS message back.

You may also register by sending the word 'Register' to 00000 upon which you will receive a confirmation message.

### Cost of the fixed line service

There is no subscription charge (other than the subscription to Caller Display). Visit the BT.com website ([www.bt.com](http://www.bt.com)) to find out how much it costs to send a text message (depends upon your call package).

### Send an SMS text message

1. Press **MENU**, SMS MESSAGES is displayed, then **OK**.
2. WRITE MESSAGE is highlighted, press **OK**. Use the keypad to write your message then press **OPTIONS**.
3. You can now scroll **UP** or **DOWN** to choose between:

SEND TO – press **OK** and either enter the number you want or press **SEARCH** to display your Directory then scroll to the entry you want. Now press **OK**. NUMBER is displayed, press **SEND**.

SAVE MESSAGE – press **OK** to save a text in the Draft messages box for sending later.

INSERT SYMBOL – press **OK** to display the choice of symbols. Scroll **UP**, **DOWN**, **LEFT** or **RIGHT** to the symbol you want and press **USE**. The symbol is added to your text at the cursor.

A single text message can be up to 160 characters. If your message is longer it will automatically be sent as linked messages. Up to 4 messages can be linked together allowing up to 612 characters to be sent.

INSERT TEMPLATE – these are pre-stored messages. Press **OK** and scroll **UP** or **DOWN** to the template phrase you want and press **USE**. The template is added to your text at the cursor.

4. When sending a message the display shows **SENDING MESSAGE**, and then, if the message is sent successfully, **MESSAGE SENT**. The message is also automatically stored in your Outbox which holds up to the last five messages sent.

If there is a problem after 3 attempts, the display shows **MESSAGE SENDING FAILED** and the handset returns to standby. If you open the Outbox the message is marked **NOT SENT**.

### Receiving a call while writing a text

1. If you are writing a text and you receive a call, the text is automatically stored in the Drafts folder.
2. After the call, press **MENU**, **SMS MESSAGES** is highlighted, press **OK** and scroll **DOWN** to **DRAFTS**. Press **OK**. If necessary, scroll to your message then press **READ**. You can now continue writing your message.



## Sent messages are stored in the Outbox

Your BT Diverse 6350's outbox is like a redial list. It holds a copy of the last 5 messages sent. The newest messages replace the oldest messages in the outbox.

## Saved messages are stored in the Drafts folder

If you want to save a message to complete and/or send later you can store it in the drafts folder. Your BT Diverse 6350 can store up to 5 messages.

## Entering text

You can enter a word by pressing each letter button a number of times to display the character you want on the screen.

To write the word "Hello", press  .

## Special characters

When writing texts the **1** and **0** buttons let you add punctuation.

<b>1</b>	.	,	'	?	!	"	1	-	(	)	@	/	:	;
<b>0</b>	space	0	+	&	_	\$	£	€	¥	<	>	=	#	*

All handsets use the same inbox, outbox and drafts folder.

To use a template, see *Send an SMS text message*, page 39.

### Writing tips

If you make a mistake, press **CLEAR** to delete the last character or digit to the left of the cursor.

1. Press **LEFT** or **RIGHT** to move the cursor.
2. Press **0** *once* to insert a space.
3. Press **\*** to switch between upper and lower case characters.

Available characters are displayed at the bottom of the screen, keep pressing the button to scroll through the characters.

The cursor automatically moves on to the next space after a couple of seconds.

### SMS templates

Use a template to add pre-set statements to make your texts easier to write.

The templates are:

- Please call
- I'll be there at
- What time will you be home?
- I'll call you
- Happy Birthday!

## Edit SMS templates

You can overwrite the existing templates with your own messages, up to 32 characters long.

1. Press **MENU**, SMS MESSAGES is highlighted, press **OK** and scroll **DOWN** to TEMPLATES and press **OK**.
2. The available templates are displayed. Scroll to the template you want and press **OPTIONS**.
3. EDIT TEMPLATE is highlighted, press **OK**. Press **CLEAR** to delete characters then enter your own template and press **SAVE**. You can now insert the new template into any text message.

## Delete SMS templates

1. Press **MENU**, SMS MESSAGES is highlighted, press **OK** and scroll **DOWN** to TEMPLATES and press **OK**.
2. The available templates are displayed. Scroll to the template you want and press **OPTIONS**.
3. Scroll **DOWN** to DELETE TEMPLATE and press **OK**. DELETE TEMPLATE? is highlighted. Press **YES** to confirm or **NO** to cancel.

When you delete a template it is shown on the screen as EMPTY.

### Read, edit and send draft SMS messages

If you have saved a message you have written for sending later, you can view, edit and send it from the Draft Messages box.

1. Press **MENU**, SMS MESSAGES is highlighted, press **OK** and scroll **DOWN** to DRAFTS. Press **OK**. The date and time of the latest draft message is displayed. Press **READ**.
2. The message is displayed. Edit the message or press **OPTIONS**.
3. You can now choose between:

SEND TO – press **OK** and either enter the number you want or press **SEARCH** to display your Directory then scroll to the entry you want. Now press **OK**. NUMBER is displayed, press **SEND**.

SAVE MESSAGE – press **OK** to save a text in the Draft messages box for sending later.


INSERT SYMBOL – press **OK** to display the choice of symbols. Scroll **UP**, **DOWN**, **LEFT** or **RIGHT** to the symbol you want and press **USE**. The symbol is added to your text at the cursor.

INSERT TEMPLATE – these are pre-stored messages. Press **OK** and scroll **UP** or **DOWN** to the template phrase you want and press **USE**. The template is added to your text at the cursor.

DELETE – press **OK** then **YES** to confirm or **NO** to cancel.

DELETE ALL – press **OK** to delete all messages stored in the Drafts folder. Press **YES** to confirm or **NO** to cancel.

### Reading SMS text messages

1. When you receive a new text message the display shows YOU HAVE NEW . To read new messages:

*either* press  then **OK**.

*or* open the Inbox by pressing **MENU**, SMS MESSAGES is highlighted, press **OK**, scroll down to INBOX, then **OK**.

2. Scroll **UP** or **DOWN** to the message you want and press **READ**.
3. Scroll **UP** or **DOWN** to read through the message.

You can now press **OPTIONS** to:

DELETE – deletes the current message.

REPLY – write and send a reply.

FORWARD – forward the message to another number.

USE NUMBER – ring the number.

SAVE NUMBER – save number to the directory (if the number is already stored, this option is not displayed).

DELETE ALL – delete all messages in the Inbox.

You will not be able to receive text messages until you have first sent a message. The first sent message registers you with the text service.

#### **Inbox capacity**

Your BT Diverse 6350 can store up to 30 received text messages.

4. Follow the on-screen prompts to save, write, send or delete the messages. Or press **BACK** to return to the previous menu level.

### **SMS alert**

Your handset will beep when you receive an SMS text message.

The default setting is **On**. You can switch this off.

1. Press **MENU**, SMS MESSAGES is displayed, press **OK** and scroll **DOWN** to SMS SETTINGS and press **OK**.
2. Scroll **DOWN** to NEW SMS ALERT. Press **OK**.
3. Press **LEFT** or **RIGHT** to select ON or OFF. Press **SAVE**.

### **SMS Service Centre numbers**

To send and receive SMS text messages you need the telephone number of your Network's SMS Centre.

If you accidentally delete the SEND or RECEIVE SMS Service Centre numbers you will need to re-enter them in order for your SMS Service to work.

The SEND SMS Service number is: **1470P1709400**.

The RECEIVE SMS Service number is: **080058752**.

### Adding or changing SMS Service Centre numbers

1. Press **MENU**, SMS MESSAGES is displayed, press **OK** and scroll **DOWN** to SMS SETTINGS and press **OK**.
2. SERVICE CENTRES is highlighted. Press **OK**.  
Service Centre 1 contains the pre-set send number.  
Service Centre 2 contains the pre-set receive number.  
Service Centre 3,4 & 5 are available for other numbers.
3. Scroll to the Service Centre you want and press **OK**.  
If necessary press **CLEAR** to delete the current number and enter the new one. Press **SAVE**.

### Select a Send Service Centre number

If you enter additional Service Centre numbers, you can choose which send Service centre you want to use. Your BT Diverse 6350 is pre-set to send using Service Centre 1 and receive using Service Centre 2.

1. Press **MENU**, SMS MESSAGES is displayed, press **OK** and scroll **DOWN** to SMS SETTINGS and press **OK**.
2. Scroll **DOWN** to SEND SERVICE and press **OK**. All Service Centres with numbers stored are displayed. Scroll **LEFT** or **RIGHT** to the Service Centre you want and press **SAVE**.  
All messages sent will go via the selected provider.

The **GENERAL** user area is assigned the sub-address of 9.

## SMS User Areas

Your BT Diverse 6350 is pre-set to make all text messages available to every user.

You can set up to 4 PIN protected user areas for your BT Diverse 6350 so that text messages can be kept private.

Each personal user area has its own Inbox, Outbox and Drafts folder.

### Setting up a user area

You can choose to have PIN PROTECTION to help keep texts private.

If you select **GENERAL MESSAGES** the sub-address has been pre-set as 9.

1. Press **MENU**, **SMS MESSAGES** is displayed, press **OK** and scroll **DOWN** to **SMS SETTINGS** and press **OK**.
2. Scroll **DOWN** to **SMS USERS** and press **OK**.
3. If required, scroll **DOWN** to the User Area you want.
4. Press **EDIT**.
5. Enter the name you want, e.g. Anne, and scroll **DOWN** to **SUB-ADDRESS**.




6. Press **LEFT** or **RIGHT** to select your sub-address number 0-9.
7. Scroll **DOWN** to PIN PROTECTION and press **LEFT** or **RIGHT** to select ON or OFF.
8. Scroll **DOWN** to PIN CODE. Enter your PIN if you have changed this from the factory setting of 0000 and PIN protection is set to ON.
9. Press **SAVE**. The screen shows your named user area.

### Send a text to an SMS user area

When your caller sends a text, by simply adding your 1-digit sub-address number on the end of your telephone number, the text will automatically be stored in your personal user area.

### Open an SMS user area

When you want to read, write and send text messages, you must open your user area first.

1. Press . All SMS user areas are displayed. Scroll **DOWN** to the user area you want and press **OK**.
2. If you have set a PIN protection, enter your 4-digit PIN and press **OK**.
3. You can now read, write, send and delete your messages as normal.


Follow these instructions to edit a SMS user area.

# Handset settings

## Ringer melody and volume (cordless handset only)

You can set separate ring melodies for external and internal calls. Each setting has a choice of 5 standard and 10 polyphonic melodies.


Select from 5 volume levels plus Off.

1. Press **MENU** then scroll **DOWN** to **HANDSET SETTINGS** and press **OK**. Display shows **RINGER**.
2. Press **OK**. Display shows **EXTERNAL**. Press **LEFT** or **RIGHT** to hear the melodies for external calls.
3. Press **DOWN** then use **LEFT** or **RIGHT** to hear the melodies for **INTERNAL** calls.
4. Press **DOWN** then use **LEFT** or **RIGHT** to set the volume.
5. Press **SAVE** to keep the settings displayed.
6. Press the  to return to standby or **BACK** to go one step back in the menu.

## Screen font and contrast


You can change the display font size and screen contrast.

1. Press **MENU** then scroll **DOWN** to **HANDSET SETTINGS** and press **OK**.
2. Scroll **DOWN** to **DISPLAY** and press **OK**.

3. Press **LEFT** or **RIGHT** to select FONT SIZE. Press **DOWN**.
4. Press **LEFT** or **RIGHT** to select the contrast level.
5. Press **SAVE**.
6. Press  to return to standby or **BACK** to go one step back in the menu.

### Handset name

When registered to the base, each handset is given a number 1-5. You can also give the handset a name to match the location or user, e.g. Mike or Office.


1. Press **MENU** then scroll **DOWN** to HANDSET SETTINGS and press **OK**.
2. Scroll **DOWN** to HANDSET NAME and press **OK**.
3. Press **CLEAR** to delete the current name. Use **LEFT** or **RIGHT** to move the cursor.
4. Use the keypad to enter the name you want
5. Press **SAVE**.
6. Press  to return to standby or **BACK** to go one step back in the menu.

The handset number will always be shown after a name has been given to the handset.


## 52 Handset settings


The default setting for auto talk is On.

### Handset beeps on/off (cordless handset only)

1. Press **MENU** then scroll **DOWN** to **HANDSET SETTINGS** and press **OK**.
2. Scroll **DOWN** to **KEYPAD** and press **OK**.
3. Use **LEFT** or **RIGHT** to select **ON** or **OFF**.
4. Press **SAVE**.
5. Press  to return to standby or **BACK** to go one step back in the menu.


### Auto talk (cordless handset only)

You can answer a call just by lifting the handset off the charger. This is called auto talk. When you switch auto talk off, all calls must be answered by pressing the  button.

1. Press **MENU** then scroll **DOWN** to **HANDSET SETTINGS** and press **OK**.
2. Scroll **DOWN** to **AUTO TALK** and press **OK**.
3. Use **LEFT** or **RIGHT** to select **ON** or **OFF**.
4. Press **SAVE**.
5. Press  to return to standby or **BACK** to go one step back in the menu.

### Select base (cordless handset only)

You can register your BT Diverse 6350 handset to up to 4 bases. If your handset has been registered to more than one base you can select which one it uses.


1. Press **MENU** then scroll **DOWN** to **HANDSET SETTINGS** and press **OK**.
2. Scroll **DOWN** to **SELECT BASE** and press **OK**.  
All bases to which the handset is registered are displayed.
3. Use **UP** or **DOWN** to select the base you want and press **OK**.
4. Press **SAVE**.
5. Press  to return to standby or **BACK** to go one step back in the menu.

When you have selected the base station, the handset will display **SEARCHING** until it finds the base's signal.

# Base settings

## Ringer melody and volume (corded handset only)

Choose from 10 standard melodies for external and internal calls and 5 volume levels plus Off.


1. Press **MENU** then scroll **DOWN** to **BASE SETTINGS** and press **OK**. Display shows **RINGER**.
2. Press **OK**. Display shows **EXTERNAL**. Press **LEFT** or **RIGHT** to hear the melodies for external calls.
3. Press **DOWN** then use **LEFT** or **RIGHT** to hear the melodies for **INTERNAL** calls.
4. Press **DOWN** then use **LEFT** or **RIGHT** to set the volume.
5. Press **SAVE** to keep the settings displayed.
6. Press the  to return to standby or **BACK** to go one step back in the menu.

## Dialling mode


You can set the dialling mode as **Tone/Timed Break/Tone/Earth** or **Pulse/Earth**.

Tone is the default setting for the UK you should only have to change this if connected to a switchboard that requires Pulse dialling.

1. Press **MENU** then scroll **DOWN** to **BASE SETTINGS** and press **OK**. Scroll **DOWN** to **DIALLING**.

2. Press **OK** then **LEFT** or **RIGHT** to display TONE or PULSE.
3. Press **SAVE** to keep the settings displayed.
4. Press  to return to standby or **BACK** to go one step back in the menu.


### Handset beeps on/off

1. Press **MENU** then scroll **DOWN** to BASE SETTINGS and press **OK**.
2. Scroll **DOWN** to KEYPAD and press **OK**.
3. Use **LEFT** or **RIGHT** to select ON or OFF.
4. Press **SAVE**.
5. Press  to return to standby or **BACK** to go one step back in the menu.

### Music on hold

Choose whether an external caller will hear musical tones if you put them on hold, e.g. while transferring them to another handset. The default setting is On.


1. Press **MENU** then scroll **DOWN** to BASE SETTINGS and press **OK**. Scroll **DOWN** to MUSIC ON HOLD.
2. Press **OK** then **LEFT** or **RIGHT** to select ON or OFF.

3. Press **SAVE** to keep the settings displayed.
4. Press  to return to standby or **BACK** to go one step back in the menu.

### **System PIN (Personal Identification Number)**

Your System PIN has a default setting of 0000.

If you change your PIN, keep a note of the new number by writing it in the space provided on *page 83*.


1. Press **MENU** then **DOWN** to BASE SETTINGS and press **OK**. Scroll **DOWN** to SYSTEM PIN.
2. Press **OK**. Display shows ENTER OLD PIN.
3. Enter the old PIN and press **OK**.
4. Display shows ENTER NEW PIN. Enter the new PIN and press **SAVE**. Display shows CONFIRM NEW PIN. Enter your new PIN again.
4. Press **SAVE**. The display shows SYSTEM PIN CHANGED.
5. Press  to return to standby or **BACK** to go one step back in the menu.



## Repeater mode

You can use a repeater to boost the range and reception of your BT Diverse 6350. A repeater must be registered with the BT Diverse 6350 and the repeater function must be set to ON.

The default setting is off.

1. Press **MENU** then scroll **DOWN** to BASE SETTINGS and press **OK**. Scroll **DOWN** to REPEATER MODE.
2. Press **OK** then **LEFT** or **RIGHT** to select ON or OFF.
3. Press **SAVE** to keep the settings displayed.
4. Press  to return to standby or **BACK** to go one step back in the menu.

# Calendar/Clock

When the time appointed arrives, the handset will ring. Two options are given:

**CLEAR** – if chosen the ringer will stop and the display will return to the standby screen.

**SILENCE** – if chosen the ringer will be turned off but the display will continue to show the appointed details until **CLEAR** is pressed.

## Use the Calendar and Clock functions to:


- Set up to 10 appointment reminder calls.
- Set an alarm call.
- Set the time & date.
- Select the time to appear in 12hr or 24 hr format.

## Appointment reminder

You can set reminder calls on each handset for up to 5 separate appointments.


Choose from 10 polyphonic melodies using the cordless handset and 10 standard melodies using the corded handset.

1. Press **MENU** then scroll **DOWN** to **CALENDAR/CLOCK** and press **OK**.
2. **APPOINTMENTS** is highlighted. Press **OK**.
3. Screen shows list of appointments. Scroll **UP** or **DOWN** to the one you want and press **OPTIONS**.
4. Scroll to **EDIT** or **DELETE** and press **OK**.  
If you select **DELETE**, then press **YES** to confirm or **NO** to cancel.
5. Enter the name of the appointment and press **DOWN**.

6. Enter the time of the appointment and press **DOWN**.
7. Enter the date of the appointment and press **DOWN**.
8. Press **LEFT** or **RIGHT** to select the melody you want.
9. Press **SAVE**.
10. Press  to return to standby or **BACK** to go one step back in the menu.

## Alarm

You can set an alarm call for an individual handset.

When an alarm is set, the screen shows .

Choose from 10 polyphonic melodies using the cordless handset and 10 standard melodies using the corded handset.


1. Press **MENU** then scroll **DOWN** to **CALENDAR/CLOCK** and press **OK**.
2. Scroll **DOWN** to **SET ALARM** and press **OK**.
3. Press **LEFT** or **RIGHT** to select **OFF/ON DAILY/MON TO FRI**. Press **DOWN**.
4. Press **LEFT** or **RIGHT** to select **TIME**, press **DOWN**.
5. Press **LEFT** or **RIGHT** to select **RINGTONE**.

When the time appointed arrives, the handset will ring.


Press **STOP** to cancel the alarm. The handset display will return to the standby screen.

## 60 Calendar/Clock

---

6. Press **SAVE** to save selections.
7. Press  to return to standby or **BACK** to go one step back in the menu.

### **Time & Date**

1. Press **MENU** then scroll **DOWN** to CALENDAR/CLOCK and press **OK**.
2. Scroll **DOWN** to TIME & DATE and press **OK**.
3. Enter the correct time then scroll **DOWN**.
4. Enter the correct date and scroll **DOWN**.
5. Press **LEFT** or **RIGHT** to select the 12hr or 24hr format.
6. Press **SAVE**.
7. Press  to return to standby or **BACK** to go one step back in the menu.

# Answering machine

You can operate your BT Diverse 6350 answering machine from:

- the corded telephone
- the cordless handset
- remotely from any external Touchtone™ telephone.

The default setting for the answering machine is Off.

Until you change your outgoing message, your callers will be greeted with the pre-recorded message *'Hello, your call cannot be taken at the moment, so please leave your message after the tone'*.

## Date and time

An announcement of date and time of recording will be added automatically to each message and memo.

When playing back messages using the cordless handset, the date and time of the message is displayed on the screen.



If you subscribe to your network provider's Caller Display service, the date and time are set automatically when your BT Diverse 6350 receives its first call, but you will also need to set the year using a handset, *see page 60*.

## Operating the answering machine at the base

### Switch on/off

1. Press . The machine announces *On* or *Off*.

### Loudspeaker volume


Volume for message playback ranges from 00 (min) to 04 (max). Press  to increase. Press  to decrease.

### Message indicator






When you have new messages, the green PLAY light flashes.

The display shows the total number of messages and/or memos stored.



### Play, repeat, skip and delete

1. Press . The machine announces the number of new messages and memos recorded. The day and time of each message is announced and then the message is played.

*During playback, press:*

-  – pause playback, press *again* to resume playback.
-  – *once* to delete the current message.
-  – *once* to repeat the current message, *twice* to play the previous message.
-  – play the next message.
-  – stops playback and returns the machine to standby.

*After playback:*

Press . You will hear, ‘*To delete all old messages, press delete*’ press  *again*, all messages are deleted. If messages are saved then you will hear, ‘*Message saved*’.

## Operating the answering machine from a handset

You can use any registered BT Diverse 6200 additional handset to switch your answering machine on and off, hear your messages and adjust the answering machine settings.

### Switch on/off

1. On the handset, press **MENU** scroll **DOWN** to **ANSWER MACHINE** and press **OK**.

During operation via the handset, you will hear prompts that guide you through each step.

**Set answer mode**

Set your answering machine to **Answer & Record** or **Answer Only**. See Answering Machine Settings, page 70.

2. Scroll **DOWN** to ANSWER ON/OFF and press **OK**. Press **LEFT** or **RIGHT** to display the setting you want. Press **SAVE**.

## Outgoing messages

This is the message your callers hear when the answering machine picks up their call. Your BT Diverse 6350 comes with two pre-recorded outgoing messages to choose from.

### Answer & Record

This invites your caller to leave a message.

The pre-recorded message is *'Hello, your call cannot be taken at the moment, so please leave your message after the tone'*.

### Answer Only

This does not allow your caller to leave a message.


The pre-recorded message is *'Hello, your call cannot be taken at the moment, and you cannot leave a message, so please call later'*.



### Record your own outgoing message

An Answer & Record message can be up to 2 minutes long. An Answer Only message can be any length depending on the amount of recording memory available.

To re-instate the pre-recorded message just delete your recorded message.

1. On the handset, press **MENU** scroll **DOWN** to **ANSWER MACHINE** and press **OK**.
2. Scroll **DOWN** to **OUTGOING MESSAGE** and press **OK**. **RECORD MESSAGE** is highlighted. Press **OK**.
3. Use **UP** or **DOWN** to select **ANSWER & RECORD** or **ANSWER ONLY**.
4. Press **OK**. Follow the voice prompt to begin recording after the tone. Press **SAVE** to stop recording or **DELETE** to cancel.
5. When you are happy with your outgoing message, press  to return to standby or **BACK** to go back one step in the menu.

### Play outgoing message


1. On the handset, press **MENU** scroll **DOWN** to **ANSWER MACHINE** and press **OK**.

**Set answer delay**

To adjust your answer delay setting, see Answering Machine Settings, *page 70*.

**Set audible message alert**

To switch message alert on or off, see Answering Machine Settings, *page 70*.

2. Scroll **DOWN** to OUTGOING MESSAGE and press **OK**.
3. Scroll **DOWN** to PLAY MESSAGE. Press **OK** then use **UP** or **DOWN** to select ANSWER & RECORD or ANSWER ONLY.
4. Press **OK**. The outgoing message is played.
5. Press  to return to standby or **BACK** to go one step back in the menu.

**Answer delay**


Answer delay sets the amount of time before your BT Diverse 6350 answering machine picks up a call. The default setting is 20 seconds. You can select an answer delay of 0, 5, 10, 15, 20, 25, 30 seconds or Time Saver.

Time Saver can save you the cost of a call when you want to ring in to find out if you have new messages. If your answering machine answers after 10 seconds, you have new messages. If you have no new messages, it won't answer your call until 20 seconds which gives you the opportunity to hang up and save the cost of a call.

**Audible message alert**

When this feature is switched On, your BT Diverse 6350 will beep every 10 seconds to indicate that you have new messages. The default setting is off.

## New message display


When you have new answering machine messages your handset screen shows YOU HAVE NEW .

1. Press **INBOX** to open the list of messages. Scroll down to **MESSAGES** and press **OK** and listen to your messages.

## Quick access to your messages

You can view all SMS, Answering Machine and missed Calls stored on your BT Diverse 6350.

To play messages stored on your answering machine.

1. On your corded or cordless handset, press the button marked . The screen shows how many received text messages, answering machine messages and missed calls you have received, e.g. SMS 1 MESSAGES 3 CALLS 8.
2. Scroll **DOWN** to **MESSAGES**, press **OK** and listen to your messages.

Incoming messages on your BT Diverse 6350 can be up to 3 minutes long. If the caller is still talking after 3 minutes, the prompt announces 'Thank you for calling' and hangs up.

## Play, pause, delete, volume

1. On your handset, press **MENU**, scroll **DOWN** to **ANSWER MACHINE** and press **OK**.
2. Screen highlights **PLAY MESSAGES**. Press **OK**.  
Your messages are played. Screen shows details of the message being played. You can now press:

PAUSE – pause the message, then press **PLAY** to resume playback.

DELETE – to delete the message.


UP/DOWN – to adjust the volume.



– to hear messages over the handset loudspeaker.

- When the last message is played, the prompt announces, *'End of messages'*.

### Delete all messages


- On your handset, press **MENU**, scroll **DOWN** to ANSWER MACHINE and press **OK**.
- Scroll **DOWN** to DELETE MESSAGES and press **OK**. Press **YES** to confirm or **NO** to cancel.
- Press  to return to standby or **BACK** to go one step back in the menu.

### Record a memo

You can record a message for other users. It is played back just like a normal message.

- On your handset, press **MENU**, scroll **DOWN** to ANSWER MACHINE and press **OK**.


Memos can be any length up to the available recording capacity (max. 20 minutes).

2. Scroll **DOWN** to **RECORD MEMO** and press **OK**. Speak after the tone. To end recording, press **SAVE**. To cancel recording press .


## Call screening

You can listen while your answering machine takes a call via the handset or the base speaker. This lets you identify the caller and decide whether to take the call yourself.


### Call screening using a handset

1. When the answering machine takes a call, the caller's details are displayed (providing you have a Caller Display service).
2. Press **SCREEN** to listen in to your caller leaving a message. If required press **UP** or **DOWN** to adjust the volume.
3. Press  on the handset to speak to your caller. Recording stops automatically.

### Call screening at the base

1. When the answering machine takes a call, press  – to set the required volume so that you can hear your


You can keep a note of your Remote Access Security PIN by writing it in the space provided on *page 83*.

caller leaving their message. If you want to talk to your caller, press  on the handset. Recording stops automatically. To switch call screening off set the volume to 00.

### Answering machine settings

The Answer Machine settings menu lets you set the:

- Answer Mode – set Answer & Record or Answer Only outgoing message
  - Answer Delay – set the time your BT Diverse 6350 answering machine takes to take your calls
  - Message Alert – set an audible beep when you have new answering machine messages
  - Security PIN – enables remote access to your messages from any TouchTone™ phone, *see page 72*.
1. On your handset, press **MENU**, scroll **DOWN** to ANSWER MACHINE and press **OK**.
  2. Scroll **DOWN** to ANSWER SETTINGS and press **OK**.
  3. Press **LEFT** or **RIGHT** to set the ANSWER MODE.
  4. Scroll **DOWN** and press **LEFT** or **RIGHT** to set the ANSWER DELAY.

5. Scroll **DOWN** and press **LEFT** or **RIGHT** to set the MESSAGE ALERT.
6. Scroll **DOWN** and enter your 4-digit remote access SECURITY PIN.
7. Press **SAVE**.
8. Press  to return to standby or **BACK** to go one step back in the menu.

## Memory full

If a caller is leaving a message when the memory becomes full your machine will announce *'Thank you for calling'* and hang up. The machine will also automatically set to **Answer Only**. You must delete messages before you can receive any new ones.

## Remote access

### Security PIN

You can operate your answering machine from any modern phone by calling your BT Diverse 6350 and entering a 4-digit security code.

The pre-set code is 0000. You can change this to help prevent unauthorised callers from listening to your messages. To change your remote access Security PIN see *Answering Machine Settings*, page 70.

## Switch answering machine on remotely

If you forget to switch on your answering machine, you can do it from another phone.

1. Dial your phone number and let it ring. After 20 rings, your answering machine will switch on.

### Time saver

If you have set the Answer Delay to Time Saver, your answering machine will answer after 10 seconds if you have new messages or 20 seconds if you do not have







new messages. This gives you time to hang up before you are connected, saving you the cost of a call. To set Answer Delay, see *Answering machine settings*, page 70.

## Operating your answering machine from another phone

1. Dial your phone number. When you hear your outgoing message, press **\***. You will hear *'Please enter your security code'*.
2. Enter your 4-digit code. If you have messages, your machine announces *'You have (n) new messages'*, and they are played. Or you will hear *'You have no messages, to hear main menu press 1'*.

Use the buttons on the keypad to operate your answering machine, press:

- 1** hear main menu.
- 2** play all messages.
- 4** once to repeat the current message, *twice* to play previous message.
- 5** delete the message being played.
- 6** skip forward to the next message.

-  **7** set answer mode.
-  **8** play your outgoing message.
-  **9** record a new outgoing message.
-  **0** switch answering machine off.

If you don't give any instructions for 8 seconds, your BT Diverse 6350 will hang up.

# Additional handsets and bases

Up to 6 handsets can be registered and operated from the BT Diverse 6350. This allows you to hold internal calls even while another handset is making an external call. Each handset can be registered on up to four bases.

## Registering additional handsets

The additional cordless handset that came with your BT Diverse 6350 is pre-registered.

If you buy new handsets to use with your BT Diverse 6350 they will have to be registered to the base before you can use them.

### **Register a new BT Diverse 6200 handset to your BT Diverse 6350**

Batteries will come inserted in the battery compartment. Pull the plastic tag as instructed to activate the batteries. Make sure the handset is close to the base. The screen shows PLEASE REGISTER.

#### *On the handset*

Place the handset in the charger. **PRESS & HOLD FIND ON BASE** is displayed on the handset.

#### *At the base*

1. Press *and hold* **FIND**.

## 76 Additional handsets and bases

---

2. The handset display shows **REGISTRATION IN PROGRESS**. When the handset is registered it will display the standby screen and will be assigned the next available handset number.

### **Register your handset to another base**

*On the handset:*

1. Press **MENU** then scroll **DOWN** to **REGISTRATION** and press **OK**. Display shows **REGISTER HANDSET**.
2. Press **OK**. The next available base is highlighted automatically, e.g. **BASE 2**.
3. Press **OK**. Enter the **SYSTEM PIN** (original setting 0000) and press **OK**.
4. The handset screen displays **PRESS & HOLD FIND BUTTON ON BASE**.

*At the base:*

5. Press *and hold* **FIND** for about 10 seconds until you hear a beep. The base is now in registration mode.

The handset screen displays **REGISTRATION IN PROGRESS**. When the handset is registered it will display the standby screen and will be assigned the next available handset number.


## Select a base

*On the handset:*

1. Press **MENU** then scroll **DOWN** to **HANDSET SETTINGS** and press **OK**. Scroll **DOWN** to **SELECT BASE**.
2. Press **OK**. Display shows **BASE 2**, **BASE 3** etc. Scroll to the base you want and press **OK**.

## De-register a handset

You can use a handset to de-register itself or any other handset from the base.

1. Press **MENU** and scroll **DOWN** to **REGISTRATION**. Then press **OK**.
2. Scroll **DOWN** to **DE-REGISTER H/SET** and press **OK**.
3. Enter the System PIN (original setting 0000) and press **OK**.
4. Select handset to be de-registered, press **OK**. **DE-REGISTER HANDSET X?** is displayed. Press **YES** to confirm or **NO** to cancel.
5. Display shows **HANDSET X DE-REGISTERED**.
6. Press  to return to standby or **BACK** to go one step back in the menu.

# Help

## **Handset not registering**

- Check that the base is plugged into the mains power and switched on.
- Check that there are charged batteries in the handset and that they are fitted correctly.

## **Forgotten your PIN number**

- Try entering the default PIN = 0000. If you have changed the number and cannot remember it, contact the BT Diverse Helpline on **0870 240 3962** or email **bt.helpdesk@vtecheurope.com**

## **No display**

- Check that the handset batteries are charged. If necessary, replace the batteries.

## **Nothing happens when you press any button**

- Is the keylock switched on? If so, press **UNLOCK** then **#** to switch keylock off.

## **No connection between cordless handset and BT Diverse 6350 corded telephone**

- You may be out of range of the BT Diverse 6350 corded telephone. Move closer.

## **Handset on the charger does not charge**

- Make sure the handset is placed properly on the charger. When charging, the battery symbol is shown filling up.

---

### **Handset does not ring**

- Check that the batteries are inserted correctly.
- Check that the handset ringer has not been switched off, *see page 50*.

### **Your caller cannot hear you**

- Secrecy is switched on. Press the secrecy OFF option button to speak to your caller again.

### **Incoming caller's number is not displayed even though you have Caller Display**

- Caller has to allow their number to be sent. It has been withheld or is unavailable.

## **Possible problems with SMS**

- SMS messages cannot be sent and screen displays MESSAGE SENDING FAILED.
- The base station power supply or telephone line cord might not be properly connected. Check that the BT Diverse 6350 power supply is plugged into the mains socket and switched on and that the telephone is plugged into the telephone wall socket.
- There might be a fault on the line. Check your telephone line is working properly.
- You might have deleted the server number in error. *See pages 46-47* for instructions on how to enter the number.
- More than one SMS product is plugged into the line. Remove other products.

**Cannot send text**

- Check service centre number is correct including 1470P prefix.

**Cannot receive text**

- Check service centre number is correct.
- Ensure you have subscribed to a Caller Display service and that it is active. You can check this by noting if your phone displays your caller's number when you receive an incoming call.

**Handset is registered to the SMS service and text has previously been sent and received but you are now only receiving incoming messages.**

- This may be due to your handset being de-registered at the text service centre. All you need to do is type Register and send it to 00000. You will receive a confirmation message back. This assumes that your Caller Display service is active and working on your line.
- Messages sent to 00000 are not charged for.

**Further help and advice for SMS queries on BT lines:**

- BT Residential customers – call 151, choose option 2, when prompted by the Fault Management Service select option 2, enter your phone number on the handset and wait to speak to a customer adviser.
- BT Business Customers – call 152, choose option 2, when prompted by the Fault Management Service select option 2, enter your phone number on the handset and wait to speak to a customer adviser.



- For other telephone service providers please contact their customer services.

### **General sales enquiries**

- BT Residential lines – call 150. BT Business lines – call 152.
- For other telephone service providers please contact their customer services.

### **Billing enquiries**

- Refer to the telephone number shown on your telephone bill.

### **Other functions and services available from the SMS service**

- By sending the following commands to the BT text self administration facility you can control functions and capabilities in your SMS phone and the way messages are handled.
- Press **MENU**. Press **OK** to WRITE MESSAGE. Type in the following commands (depending upon what you want to do) and send to 00000:

**\* 1 #** Opt out from receiving voice text messages.

**# 1 #** Turns off the opt out option.

**\* 2 #** Turns on permanent voice text message delivery to your phone. All incoming text is delivered as voice text.

**# 2 #** Turns off permanent voice text message delivery.

**If you are sending a message from a fixed line phone to another fixed line phone**

**\* 3 #** Forces a message you send to be delivered as a voice text even though the recipient may have an SMS enabled phone and usually receives written text.

This command is inserted at the start of the message and applies only to that message, e.g. **\* 3 #** 'Hello I will be home late'.

**If you are sending a message from a fixed line phone and require a status report**

**\* 0 #** Will allow a status report to be sent back to you when you have sent a message to confirm delivery. Place **\* 0 #** at the start of your text message. Write the message and send it. You will receive a reply text back to your phone giving the status report for that message.

**You keep hearing an error beep**

- You have pressed the wrong button in a sequence. Check the prompts in the display or refer to instructions in this user guide.

**Customer Helpline**

If you experience any difficulties please call the BT Diverse Helpline on **0870 240 3962** or email **bt.helpdesk@vtecheurope.com**

**For your records**

Date of purchase:

Place of purchase:

For guarantee purposes, proof of purchase is required, so please keep your receipt.

Enter your system PIN here:

[   /   /   /   ]

For more information on your system PIN, see *page 56*.

Enter your Remote Access PIN code here:

[   /   /   /   ]

For more information on your Remote Access PIN, see *page 72*.

# General information

## IMPORTANT

The BT Diverse 6350 corded telephone is designed for making emergency telephone calls when the power fails. However, the BT Diverse 6200 additional cordless handset will not work in these circumstances.

This product is intended for connection to analogue public switched telephone networks and private switchboards in the United Kingdom.

## Safety information

- Only use the power supply suitable for the BT Diverse 6350 range. Using an unauthorised power supply will invalidate your guarantee and may damage the telephone.
- For the handset, use only AAA Nickel Metal Hydride (NiMH) rechargeable batteries with a minimum capacity of 750mAh. Never use other batteries or conventional alkaline batteries as this could lead to a short circuit or destroy the battery casing.
- If the keypad is locked, it is still possible to make emergency calls to 999 and 112 numbers.
- Do not open the handset (except to replace the handset batteries). This could expose you to high voltages or other risks.
- Radio signals transmitted between the handset and base may cause interference to hearing aids.
- It is recommended that advice from a qualified expert be sought before using this product in the vicinity of emergency/intensive care medical equipment.
- It is recommended that if you have a pacemaker fitted you check with a medical expert before using this product.

- Never dispose of batteries in a fire. There is a serious risk of explosion and/or the release of highly toxic chemicals.

### **Cleaning**

- Simply clean the handset and base with a damp (not wet) cloth, or an anti-static wipe. Never use household polish as this will damage the product. Never use a dry cloth as this may cause a static shock.

### **Environmental**

- Do not expose to direct sunlight.
- The BT Diverse 6200 additional handset may become warm when the batteries are being recharged. This is normal. We recommend that you do not place the product on antique/veneered wood to avoid damage.
- Do not stand your product on carpets or other surfaces which generate fibres or place it in locations preventing the free flow of air over its surfaces.
- Do not submerge any part of your product in water and do not use it in damp or humid conditions, such as bathrooms.
- Do not expose your product to fire, explosive or other hazardous conditions.
- There is a slight chance your phone could be damaged by an electrical storm. We recommend that you unplug the power and telephone line cord during an electrical storm.

## Product disposal instructions

The symbol shown here and on the product means that the product is classed as Electrical or Electronic Equipment and should not be disposed with other household or commercial waste at the end of its working life.



The Waste of Electrical and Electronic Equipment (WEEE) Directive (2002/96/EC) has been put in place to recycle products using best available recovery and recycling techniques to minimise the impact on the environment, treat any hazardous substances and avoid the increasing landfill.

### **Product disposal instructions for residential users**

When you have no further use for it, please remove any batteries and dispose of them and the product as per your local authority's recycling processes. For more information please contact your local authority or the retailer where the product was purchased.

### **Product disposal instructions for business users**

Business users should contact their suppliers and check the terms and conditions of the purchase contract and ensure that this product is not mixed with other commercial waste for disposal.

---

## Connecting to a switchboard

### Switchboard compatibility

- This telephone may be connected to most types of switchboard, however in the event of any difficulties, consult your switchboard Service Provider.

### Dialling mode

- Your BT Diverse 6350 is set to Tone dialling. Some switchboards may require Pulse dialling. To change the dialling mode, see Dialling mode, *page 54*.

## Guarantee

Your BT Diverse 6350 is guaranteed for a period of 12 months from the date of purchase.

Subject to the terms listed below, the guarantee will provide for the repair of, or at BT's or its agent's discretion the option to replace the BT Diverse 6350, or any component thereof, (other than batteries), which is identified as faulty or below standard, or as a result of inferior workmanship or materials. Products over 28 days old from the date of purchase may be replaced with a refurbished or repaired product.

### The conditions of this guarantee are:

- The guarantee shall only apply to defects that occur within the 12 month guarantee period.
- Proof of purchase is required.

- The equipment is returned to BT or its agent as instructed.
- This guarantee does not cover any faults or defects caused by accidents, misuse, fair wear and tear, neglect, tampering with the equipment, or any attempt at adjustment or repair other than through approved agents.
- This guarantee does not affect your statutory rights.

**Within the 12 month guarantee period:**

If you experience difficulty using the product, prior to returning your product, please read the Help section beginning on *page 78* or contact the BT Diverse Helpdesk for assistance on **0870 240 3962** or email **bt.helpdesk@vtecheurope.com**. The helpline is open from 9.00am-5.30pm Mon-Fri and 9.30am-2.30pm Saturdays.

In the unlikely event of a defect occurring, please follow the Helplines' instructions for replacement or repair.

**Outside of the 12 month guarantee period:**

If your product needs repair after the guarantee period has ended, the repair must meet the approval requirements for connection to the telephone network. We suggest that you call our recommended repair agents on **08702 405029**.

## Additional/Replacement Items

For a full range of replacement items, including additional handsets for either the BT Diverse 6000 range or BT Freestyle 2000, 4000 or 7000 ranges, please call **0870 240 3962**.



---

## Technical information

### How many telephones can you have?

All items of equipment have a Ringer Equivalence Number (REN) which is used to calculate the number of items that may be connected to any one telephone line.

The BT Diverse 6350 has a total REN of 1, i.e. for a base and up to 6 handsets.

Any other instrument provided by BT may be assumed to have a REN of 1 unless stated otherwise.

A total REN of 4 is allowed per telephone line. (For example, if the BT Diverse 6350 is used in conjunction with three extension telephones, each with a REN of 1, then the total = 4.)

## R&TTE

This product is intended for use within the UK for connection to the public telephone network and compatible switchboards.

This equipment complies with the essential requirements for the Radio Equipment and Telecommunications Terminal Equipment Directive (1999/5/EC). In demonstration with the Essential Requirement for efficient use of the radio spectrum, the product complies with EN301 406. For a copy of the Declaration of Conformity please contact the BT Diverse Helpline on **0870 240 3962** or email **bt.helpdesk@vtecheurope.com**

# Wall mounting your phone

## WARNING

The screws supplied to wall mount your BT Diverse 6350 corded telephone will NOT be suitable for all wall types. BT recommends that you seek advice from a building professional before attempting to wall mount your phone. BT are not responsible for any damage/injury caused while attempting to wall mount your phone.

## Before you wall mount, please check that:

- the wall can support the weight of the phone
- you are not drilling into any hidden wiring or pipes
- the telephone line cord will reach the telephone socket

## Using the handset park when the phone is wall-mounted


If you need to leave the phone whilst on a call, hang the handset on the handset park at the top left-hand side of the base.

## Wall mounting the corded telephone

1. Unclip stand from the base of the phone.


Re-route the line cords towards the bottom of the phone.

2. Rotate the stand 180° and re-attach to the base unit by clipping it into the two slots near the bottom of the base.
3. Drill two holes in the wall 71mm vertically apart using an 8mm drill bit.

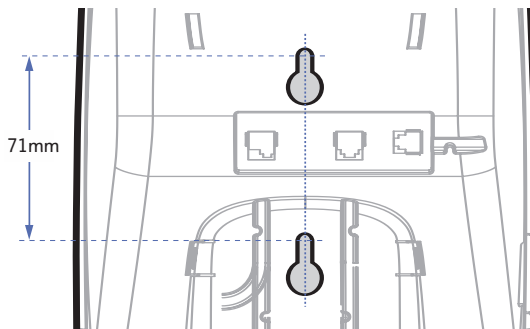

4. Insert the wall plugs if necessary then insert the screws leaving about 5mm protruding from the wall on which to hang the phone.


5. Rotate the handset hook 180° so that it sticks upwards. This holds the handset in place when wall-mounted.

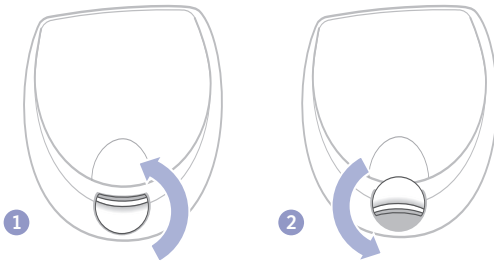

6. Slot the holes on the back of the base over the screw heads and gently pull the phone down to make sure it is securely in place.

### Wall mounting the cordless handset and charger


1. Drill two holes in the wall 25mm horizontally apart using an 8mm drill bit. Use the wall mounting bracket as a template if necessary.

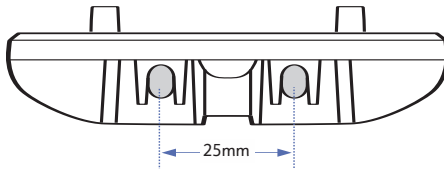

## 92 Wall mounting your phone

---

2. Insert the wall plugs if necessary then insert screws leaving about 5mm protruding from the wall on which to hang the phone.
3. Take the mains power cable out of the socket on the charger.
4. Slide the wall mounting bracket onto the underside of the charger and plug the power cable back in.

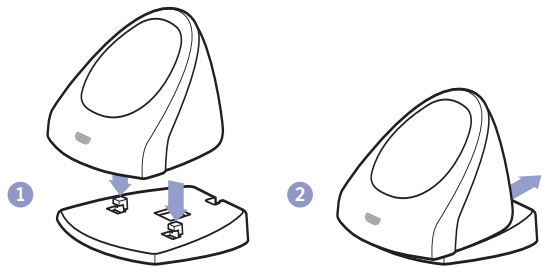

4. Slot the holes on the back of the mounting bracket over the screw heads and gently pull the charger down to make sure it is securely in place.







Visit us at [www.bt.com](http://www.bt.com)



## Offices worldwide

The telecommunications services described in this publication are subject to availability and may be modified from time to time. Services and equipment are provided subject to British Telecommunications plc's respective standard conditions of contract. Nothing in this publication forms any part of any contract.

© British Telecommunications plc 2005.  
Registered Office: 81 Newgate Street, London EC1A 7AJ.  
Registered in England No. 1800000.  
BT Diverse 6350 Issue 3 (11/05) 1  
Designed and produced by The Art & Design Partnership Ltd.  
Printed in China

